
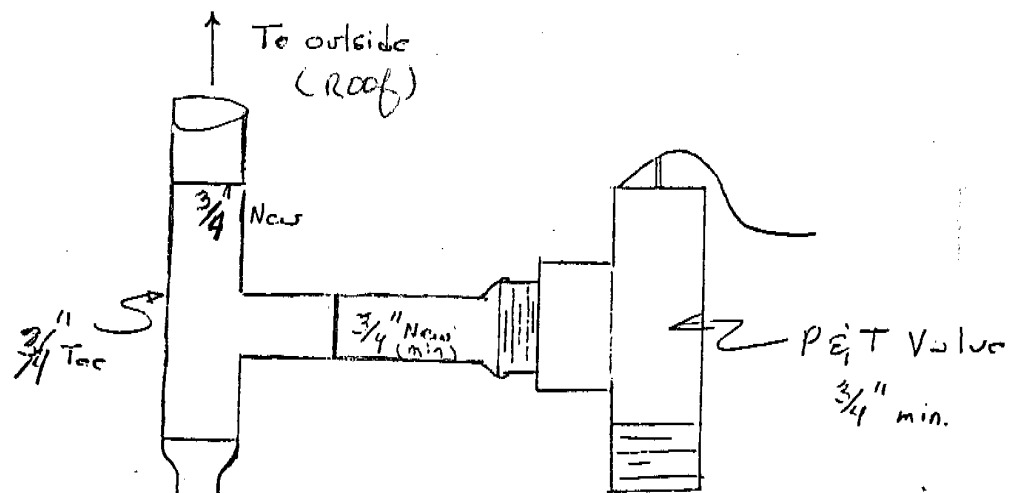


USE THESE DWGS, WHEN W.H. IS IN CENTER OF HOUSE, WITH A 1/2 RELIEF LINE OR NO RELIEF LINE TO OUTSIDE,

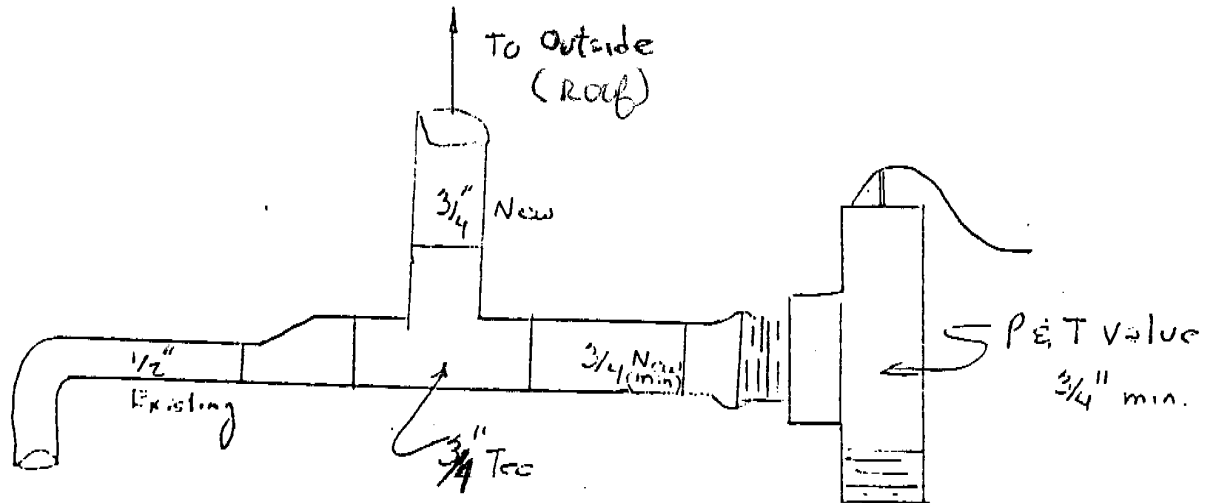

FOR EXISTING HOUSES
CONNECT BOTTOM OF TEE TO
EXISTING 1/2 RELIEF LINE OR
DRILL A 1/16\" HOLE IN CAR

DRILL 1/16\" HOLE
IN CAP

WHEN THERE IS NO OTHER
WAY TO RUN A RELIEF LINE
OTHER THAN UP TO ROOF